



Table Top Assembly Instructions

Top Panel : 24" x 24" panel

Total printable area : 22.50" x 22.50"

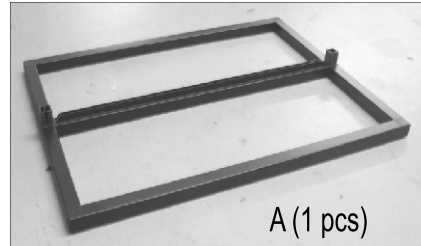

1. Figure A is the base and it is pre-assembled.

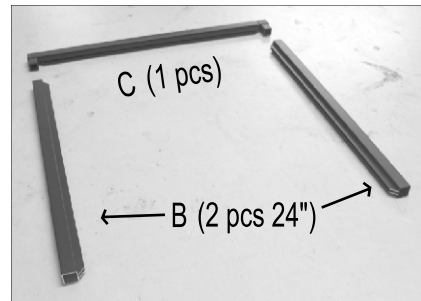

2. Items "B" should fit onto the knobs of base (A) in the orientation shown with channels on the inside. May require light tapping.

3. Slide in the sign board.

4. Fit item "C" onto items (B)

